

Unbeatable portability, crafted with style.

High-end baby products for
modern families on-the-go!

	Region	①
User Manual		EN
Bruksanvisning		SV
Gebrauchsanweisung		DE
Gebruiksaanwijzing		NL
Manuel de l'Utilisateur		FR
Manual de usuario		ES
Manuale d'uso		IT

Freedom with fewer and better baby products.

hannie® products address universal needs. We appeal globally through responsible design, tailored to contemporary lifestyles for children 0-5Y and their most important adults.

We value freedom to socialise inside and outside the home. To enjoy life together. Freedom with fewer and better products.

Welcome to hannie!


01. Introduction

This manual is designed to ensure the safe and convenient use of the **Portable High Chair**. It's the *only* baby chair you need—simply place it on top of your dining chair and say goodbye to bulky high chairs!

KEY FEATURES

- Portable, Packable & Pioneering Design.
- Use from 6 months - to 5 years of age. Can transform from Baby Chair into a Toddler Seat.
- Fulfills safety standard (EN 16120:2012+A2:2017).
- Reversible Cushion (including Back Plate Support - extra comfort for the little ones).
- Designed to be easily recycled by the end user.
- Dishwasher Safe & Food Safe materials.
- Easy Assembly.

INCLUDED IN THE BOX

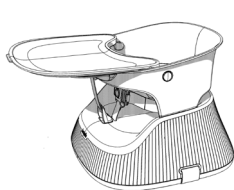


The Portable
High Chair



Reversible
Cushion



Back Plate
Support

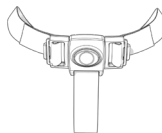


3-Point Safety
Harness



Protective
Tote Bag

PRODUCT COMPONENTS

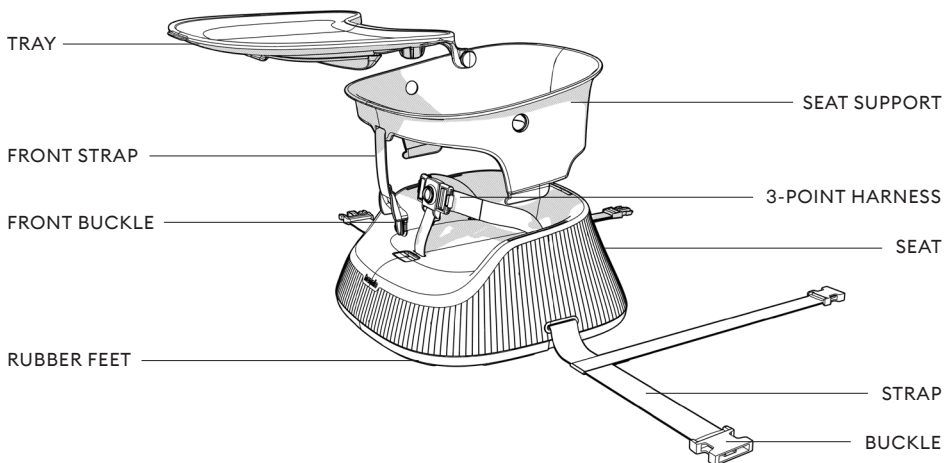

IMPORTANT INFORMATION! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Instructions for the correct and safe assembly and use of the product: Safety is our top priority. Always follow the guidelines in this manual to keep the child safe while using The Portable High Chair.


CAUTION: Always ensure that the seat's **RUBBER FEET** are effectively functioning as contact points.

Please read and follow the warnings and instructions carefully before using this product. Keep these instructions for future reference.


The diagram indicates the **MINIMUM** dimensions of an adult chair that The Portable High Chair should be used on.

MINIMUM DIMENSIONS OF ADULT CHAIR:

W: 15 in. (38 cm) D: 14 in. (35 cm) H: 12 in. (30 cm)

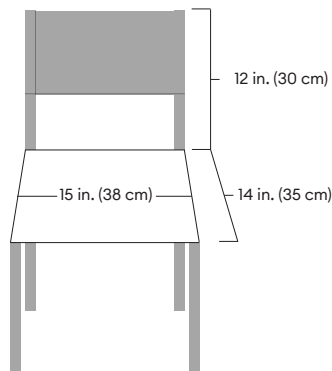

DIFFERENT SEATING OPTIONS

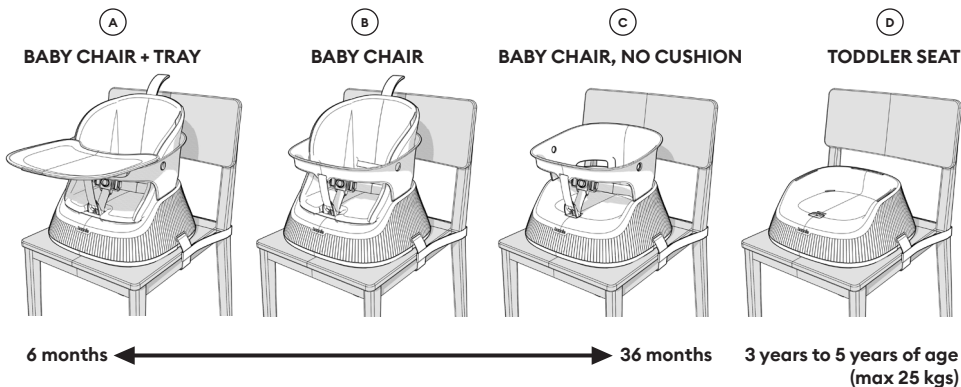

The Portable High Chair is designed for long-term use, accommodating children from 6 months to 5 years old with various seating options. When not in use, all parts can be conveniently stored within the seat compartment.

02. Safety Information



WARNING


Children have suffered head injuries, including skull fractures, after falling with or from booster seats.

- **Always** use the chair attachment system and ensure it is correctly fitted before use.
- **Always** use the restraint system and ensure it is correctly fitted.
- Until the child is able to get in and out of the booster seat without help (about 2 1/2 years old), the child should be secured in the chair at all times by the restraining system. The tray is not designed to hold the child in the Portable High Chair.
- Use this product only for children capable of sitting upright unassisted.
- **Always** check the security and the stability of the product on the adult chair before use.
- **Always** make sure that the adult chair with the child seat mounted is positioned so that the child cannot use his or her feet to push against the table or any other structure, as this can cause the adult chair with the mounted child seat to tip over.
- **Never** leave the child unattended.
- **Never** allow child to **push away from table**
- **Never lift** and **carry** child in booster seat.
- Prevent serious injury or death. Do not use in motor vehicles.
- **Do not** use this product on bar stools, folding chairs, swivel chairs or benches. The recommended type of chair shall be with four legs, a high backrest, and a firm seat.
- **Do not** use if any part is missing, torn or broken.
- **Do not** use any accessories on replacement parts unless specifically approved by the manufacturer.
- The baby chair mode is intended for children able to sit up unaided (minimum 6 month) and up to 36 month or a maximum weight of 15 kg (33 lbs).


03. Installation

QR-CODE TO VIEW INSTRUCTIONAL VIDEOS

Scan QR-code to watch full assembly videos of the Portable High Chair OR follow the steps in this user manual.

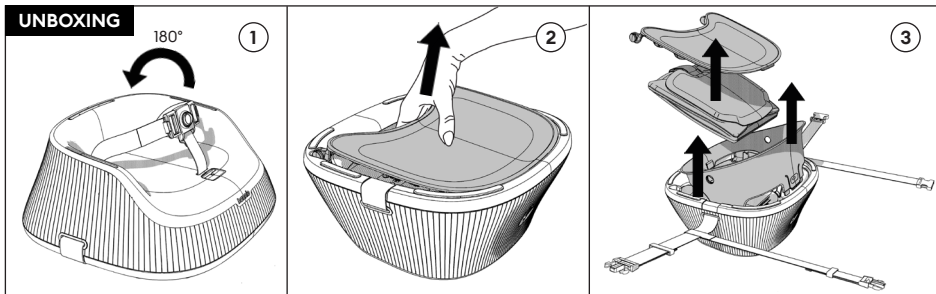


1. Turn the packed chair so that the bottom side is facing up.
2. Detach the TRAY by pulling it upwards.
3. Pick out all the parts you need, i.e. Seat Support, Cushion, Straps and Tray.

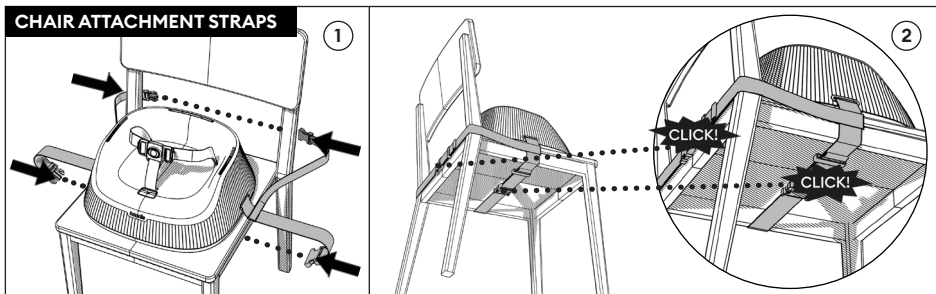


1. Place the child seat centered on a suitable adult chair. There must be at least 1 cm left on each side of the chair seat.
2. First - click and fasten the wide strap under the adult seat. Then click the narrow strap around the backrest of the adult chair.

CUSHION & 3-POINT SAFETY HARNESS ATTACHMENT

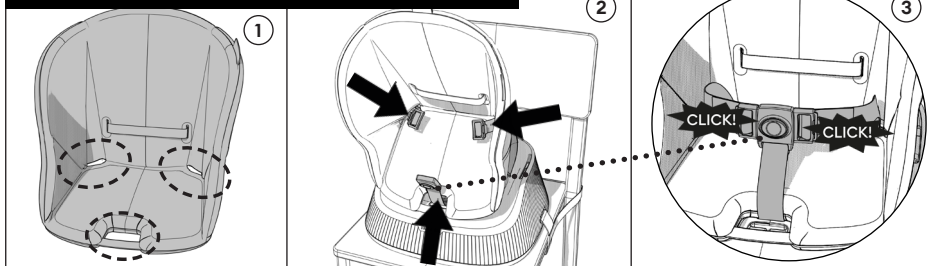


1. Choose which side you want facing up on the cushion and locate the three openings.
2. Thread the three straps through in the openings.
3. Click the side straps into the buckle on the center strap.

SEAT SUPPORT & FRONT BUCKLE ATTACHMENT

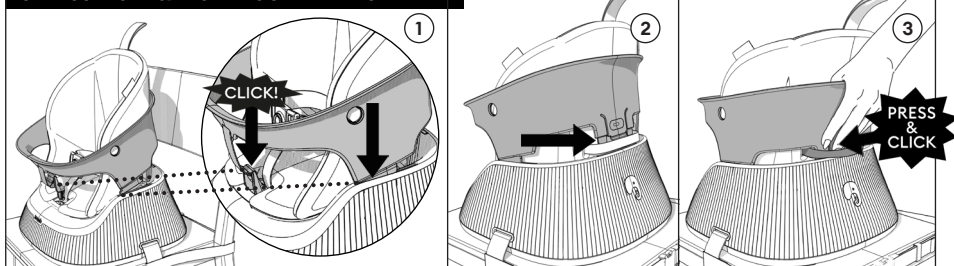

1. Place the side hooks of the SEAT SUPPORT in their slots on the SEAT. Click the FRONT BUCKLE into the SEAT.
2. Fix the cushion by threading the strap on the cushion around the fasteners on the SEAT SUPPORT.
3. Press the middle hook on the SEAT SUPPORT and click it firmly into the SEAT. Check that all parts are properly assembled.


TRAY ATTACHMENT

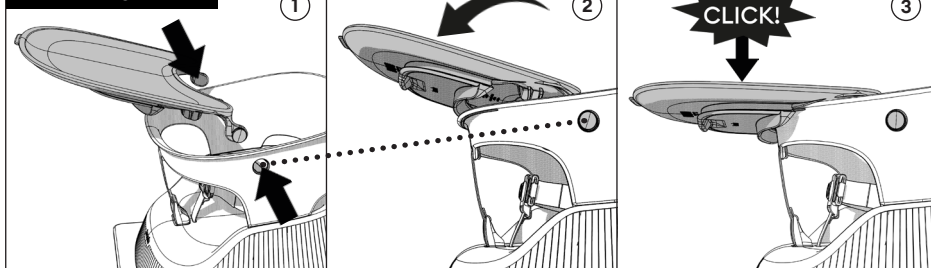

1. Slide the two circles on TRAY down into the round openings on SEAT SUPPORT. Check that the snap is correct.
2. Rotate TRAY down. The hook on the underside must snap over the edge of SEAT SUPPORT.
3. Click the TRAY firmly by pushing it down. Check that TRAY is properly fixed.


04. Usage Instructions

3-POINT SAFETY HARNESS

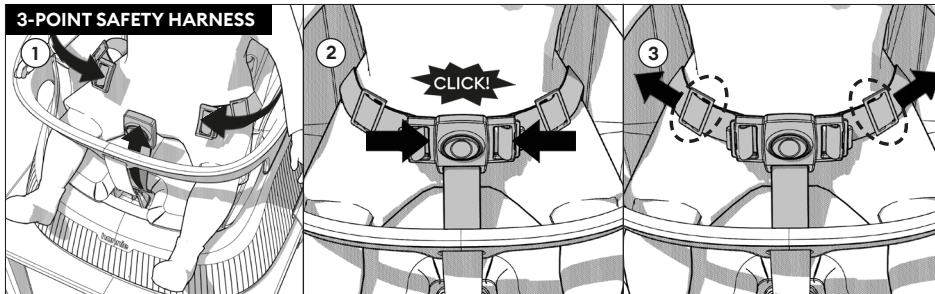


- 1. Secure straps:** Pull waist straps over child's thighs, ensuring they're flat.
- 2. Fasten buckle:** Secure waist straps snugly around waist, connecting to strap between legs.
- 3. Adjust fit:** Ensure all three straps are snug but not too tight.

HOW TO UNFOLD THE CUSHION

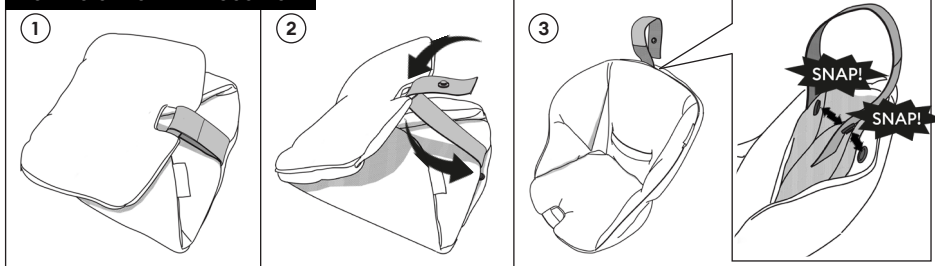

- 1. Open strap:** Undo the double buttons to release the STRAP.
- 2. Cushion unfold:** Unfold the cushion, ensuring the BACK PLATE SUPPORT is securely in its pocket.
- 3. Lock strap:** Align the double buttons correctly and snap them together to secure the BACK PLATE.


BACK PLATE SUPPORT

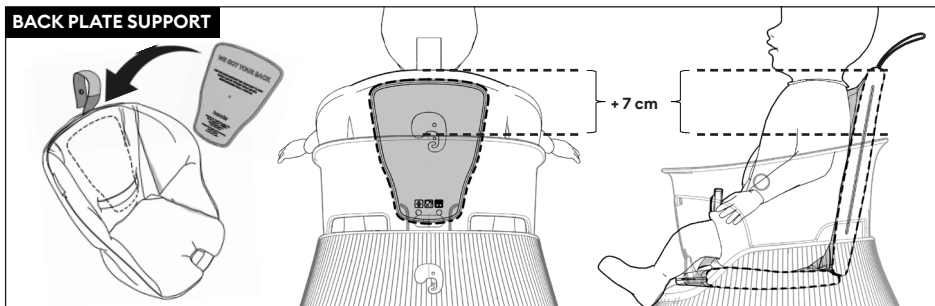

- Designed for our youngest users.
- Designed for learning how to sit and find balance, adding 7cm in height.
- Ergonomic support for crucial development stage.

05. How to pack The Portable High Chair

DETACH TRAY

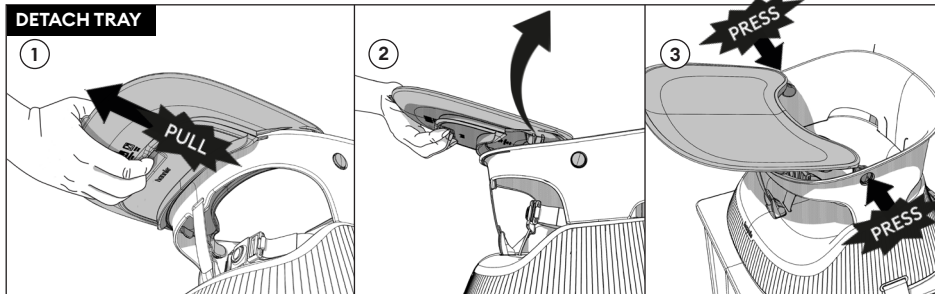


1. **Removing:** Grab the TRAY and pull it towards you so that it detaches from the SEAT SUPPORT.
2. **Lifting:** Keep holding on while you lift the TRAY upward.
3. **Detaching:** Release your grip and make sure to press in the two circles so that they detach from the SEAT SUPPORT.

DETACH SEAT SUPPORT




1. **Unlock Front Buckle:** Press both sides of the FRONT BUCKLE at once to release it.
2. **Detach Seat Support:** Press both sides of the SEAT SUPPORT in opposing directions to disconnect it.
3. **Visual Confirmation:** Lift the SEAT SUPPORT upward to release it from SEAT.

PUT ALL PARTS IN SEAT COMPARTMENT

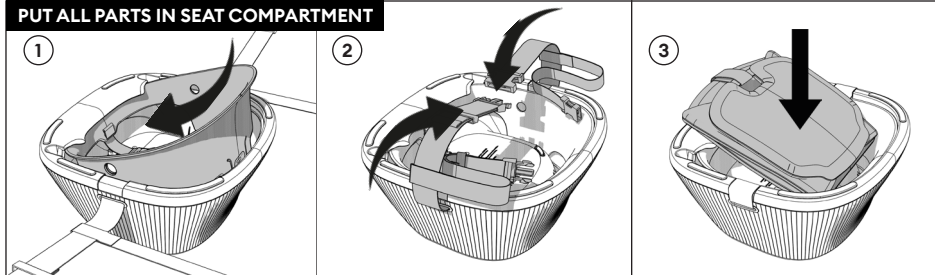

1. **Storing Seat Support:** Tilt the SEAT SUPPORT to position its front end beneath the front edge of the SEAT.
2. **Storing Webbing:** Place all STRAPS and BUCKLES in the SEAT compartment.
3. **Storing Cushion:** Finally, place the CUSHION into the SEAT compartment.

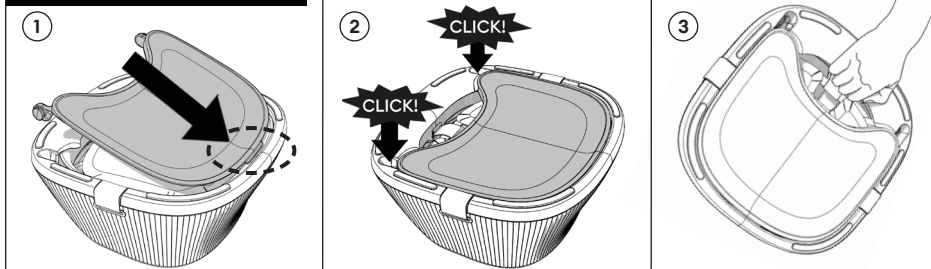PACK - USE THE TRAY AS A LID

1. **Align the Tray:** Position the TRAY above the compartment, tilting the front side down to fit the slots. This step is crucial for a proper fit.
2. **Attach the Tray:** Press down until you hear a click, securing all parts.
3. **Grab & Go:** Just grab it and you're all set for life on-the-go!

06. Cleaning & Maintenance

CAUTION! READ THIS TEXT BEFORE CLEANING

HOW TO CLEAN THE PORTABLE HIGH CHAIR

TRAY: The TRAY is food & dishwasher safe. Use gentle programme 50-60 °C. You can also simply wipe off the TRAY with a damp cloth.

SEAT & SEAT SUPPORT: To eliminate surface dirt and spills, simply wipe off the SEAT & SEAT SUPPORT with a damp cloth. For tough stains, gently scrub with mild detergent and water. We advise against placing the SEAT & SEAT SUPPORT itself in the dishwasher.

3-POINT HARNESS: The 3-POINT HARNESS is machine washable in 40°C. Use laundry bag. Do not tumble dry. You can also simply wipe the harness with a damp cloth or rinse it with lukewarm water.

Regular Maintenance: Regularly check for chair damage. Replace or repair promptly with Hannie-recommended parts for safety.



HOW TO CLEAN THE CUSHION

Light Stains: Use a damp cloth to gently remove light stains from the polyester fabric.

Machine Wash: Remove the BACK PLATE SUPPORT from the Cushion. The Cushion is machine washable in 40°C. Avoid dry cleaning. Tumble dry at a low temperature to maintain its quality.

Reversible Design: Before machine washing, flip the cushion to utilize both sides. The design works both ways.



07. Technical Specifications

PRODUCT DIMENSIONS

- **Height:** 277 mm
- **Width:** 352 mm
- **Length:** 344 mm

PRODUCT MATERIALS

- Polypropylene (PP)
- TPE
- Polyester
- Polyamide (PA)

CUSHION MATERIALS




- **Outer:** 100% Polyester
- **Filling:** 50% Polyester, 50% Polyurethane

PRODUCT WEIGHT:

- 1.8 kg

SAFETY STANDARD:

- EN 16120:2012+A2:2017

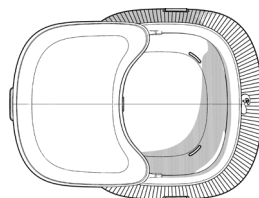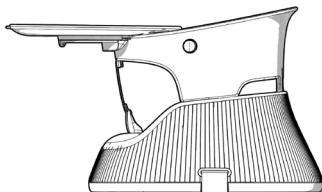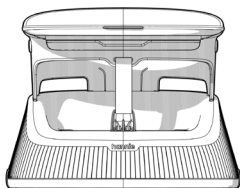

08. Warranty Information

Our Portable High Chair exceeds quality and safety expectations. If any issues arise within **two (2) years** due to faulty workmanship or materials, we'll repair or replace it free of charge. Your satisfaction is our priority.

The warranty of the Portable High Chair becomes void if the product is damaged due to the following:

- Damages caused by misuse or any use of this product that is not in accordance with the instructions stated in this manual.
- Problems caused by extreme influence from external factors, such as sun/light, temperature, humidity.
- Modification or repair conducted by anyone other than Hannie AB.

For **complete** information about the Hannie Warranty please visit **hannie.com**.

09. Customer Support

If you need assistance or have any questions about your Portable High Chair, our dedicated customer support team is available to help.

Contact us at **support@hannie.com** for prompt assistance. Be sure to include your order number and a detailed description of the issue or question you have.

We value your satisfaction and are committed to providing timely and effective support. Don't hesitate to get in touch and we'll make every effort to address your needs promptly.

Hannie AB
support@hannie.com
www.hannie.com

Tegelbruksvägen 15A
126 34 Hägersten
Stockholm - Sweden